


A-M25E MEGAPHONE Manual

Megaphone for handheld use. Built-in anti-howl microphone
Metal and ABS construction. Siren/whistle alarm function

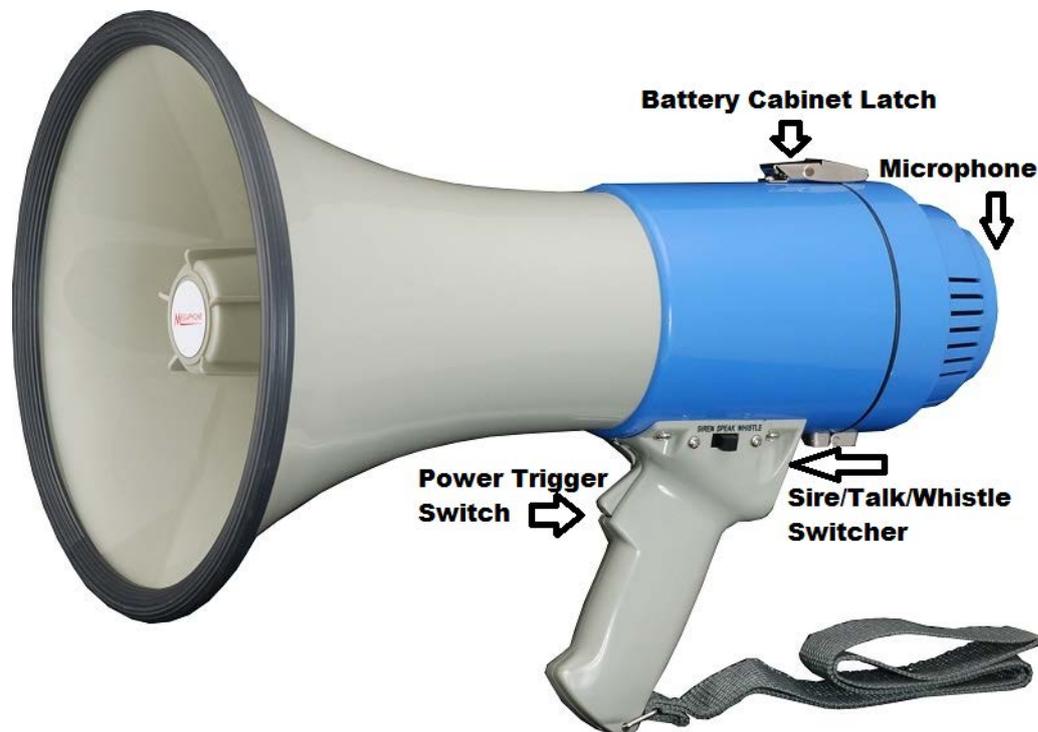

To Install Batteries

1. Release the latch and open the top cover of the megaphone, take out plastic battery cases.
2. Insert 8pcs type D-Cell (UM-1) batteries in the plastic battery cases observing correct polarity.
3. Insert the battery cases with batteries into the battery compartment of the megaphone observing correct polarity as indicated on the inside of the battery compartment.

Operating Instructions

1. When carrying the megaphone on hand, turn the switch on the handle to "SPEAK". Push the trigger on the handle or detachable microphone for temporary talking. Adjust the volume knob on the detachable microphone to get enough volume output. Push and lock the switch on the detachable microphone to keep megaphone powered on.
2. To use the siren and whistle, select "SIREN" or "WHISTLE" and push the trigger on the handle.

Notes

1. Make sure the batteries are inserted correctly, observing correct polarity.
2. Remove the batteries when the megaphone is not in use for a long period of time.
3. Replace batteries if volume is low. Batteries should be replaced at regular intervals for better performance.

Technical Specification

Range	:	Up to 1500m in open area.
Power	:	8pcs size D type batteries (not included in package) or external 12-15V DC
Weight	:	1.25Kg approx. without batteries
Dimensions	:	230mm (Diameter) × 370mm (Length)

A-M25D MEGAPHONE Manual

Megaphone for handheld/shoulder carry use.

Detachable microphone with switch and volume controller.

Metal and ABS construction. Siren/whistle alarm function



To Install Batteries

1. Release the latch and open the top cover of the megaphone, take out plastic battery cases.
2. Insert 8pcs type D-Cell (UM-1) batteries in the plastic battery cases observing correct polarity.
3. Insert the battery cases with batteries into the battery compartment of the megaphone observing correct polarity as indicated on the inside of the battery compartment.

Operating Instructions

1. When carrying the megaphone on hand, turn the switch on the handle to "SPEAK". Push the trigger on the handle or detachable microphone for temporary talking. Adjust the volume knob on the detachable microphone to get enough volume output. Push and lock the switch on the detachable microphone to keep megaphone powered on.
2. To use the siren and whistle, select "SIREN" or "WHISTLE" and push the trigger on the handle.

Notes

1. Make sure the batteries are inserted correctly, observing correct polarity.
2. Remove the batteries when the megaphone is not in use for a long period of time.
3. Replace batteries if volume is low. Batteries should be replaced at regular intervals for better performance.

Technical Specification

Range	:	Up to 1500m in open area.
Power	:	8pcs size D type batteries (not included in package) or external 12-15V DC
Weight	:	1.25Kg approx. without batteries
Dimensions	:	230mm (Diameter) × 350mm (Length)